



## Pairing the wireless switch with XR6000

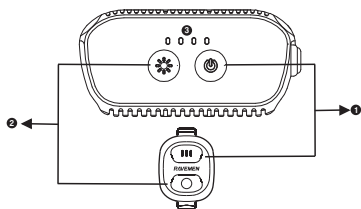

- ❶ Power button
- ❷ Menu button
- ❸ Battery indicators

1. Turn the light on. Press and hold the power button and menu button of the light simultaneously for 3s until the battery indicators are flashing one by one;
2. Press and hold the power button and menu button of the ARS03 simultaneously for 3s to connect with the light. When connected, the battery indicators will flash 5 times and turn to constant; if not, repeat this step;
3. Click the button of the wireless switch to make sure it works with the light correctly.


## Pairing the wireless switch with PR2400

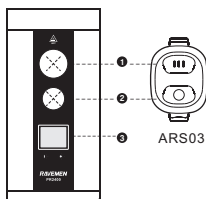

- ❶ Power button
- ❷ Menu button
- ❸ OLED display

1. Turn the light on. Press and hold the power button and menu button of the light simultaneously for 5s until the ➤ icon on the OLED display is flashing;
2. Press and hold the power button and menu button of the ARS03 simultaneously for 5s to connect with the light. When connected, the ➤ icon on the OLED display will change to ⬅ and stop flashing; if not, repeat this step;
3. Wait 5s until the light flashes 3 times after pairing successfully; Click the button of the wireless switch to make sure it works with the light correctly.

## Pairing the wireless switch with LR1600

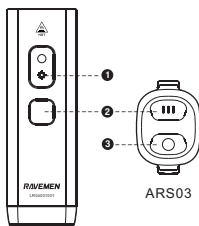

- ❶ Blue indicator
- ❷ Power button
- ❸ Menu button

1. Long press the power button of the light for 5 seconds till the blue indicator blinks slowly, then turn off the light;
2. Long press the power button of the light for 5 seconds till the blue indicator blinks quickly;
3. Long press the power button and menu button of the ARS03 simultaneously for 5 seconds to connect with the light. When paired successfully, the blue indicator will turn to slow blinking for 5 times; If not, repeat this step.
4. Click the button of the wireless switch to make sure it works with the light correctly.